
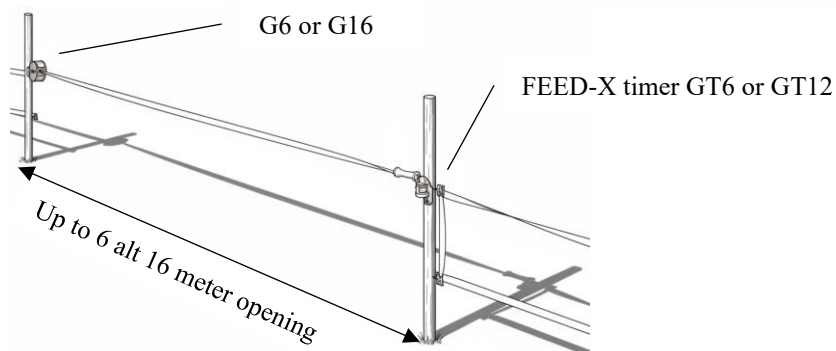


***FEED-X_{TM}* Gate opener G6 & G16**

6 and 16 meter versions

Instructions / Installation

Mount example :

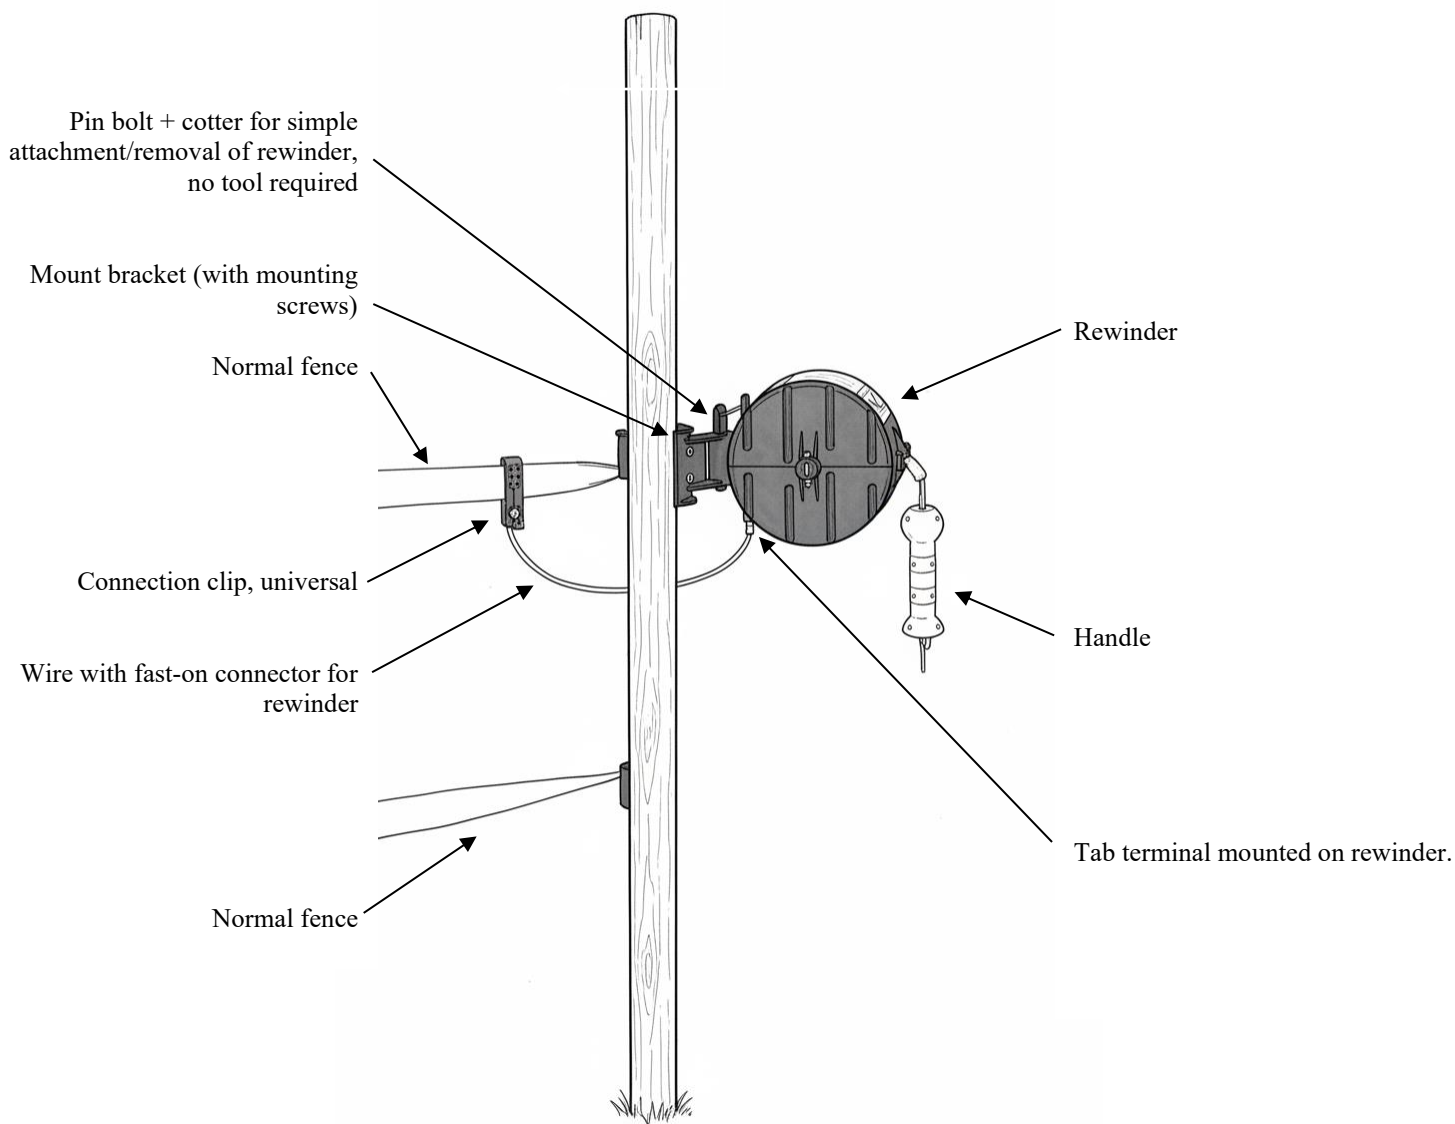


Tools needed :
One screwdriver (PH2)

Mounting instructions

1. Screw the mounting bracket to one post. The bracket should be straight so the rewinder does not tilt to one side during rewinding.
2. Push in the rewinder fitting into bracket and secure with pin bolt + cotter . The label should always be up, and thus draiholed down.
3. Assemble the connection clip according to picture below – First, push together Uhook and receptacle then insert in the clip. Fold it together onto electric tape or rope.
4. Push other end onto connector tab on the rewinder. NOTE – this will energize both rewinder and tape.

Technical data

Max lenght gate opening	6 alt. 16 meter
Wheight	1,7 kg
Diameter	20 cm
Width	14 cm
Rewind speed	App 2 m/sec – regulated with an integrated brake.
Handle	Lightweight design, specially made, not to get caught in vegetation , wet snow or mud.

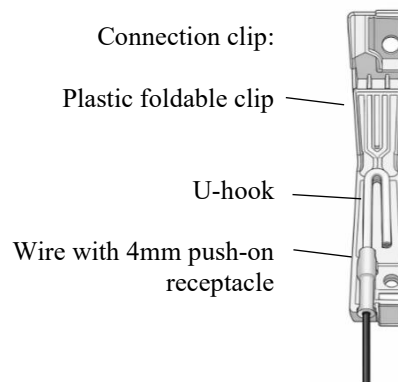

Risk management

The design is made to minimize risk of damage to both animals and equipment.

A feature of our rewinder is the inbuilt speed regulating brake system. It allows for a powerful "rewind motor" but keeps speed at a moderate 2 m/s during the full rewind operation.

If You use other types of rewinders, the speed is way too fast and will spook horses and damage material. They are normally not designed to simply let go of the handle.



Winter and ice

Parts and materials are chosen for nordic climate. All year.

In wet wether when temperature go from above to below zero, there may be problems with buildup of ice on the tape which may prevent the rewinding. In bad cases it may need to be dismounted and taken inside for thawing. Thanks to bracket and pin bolt it's an easy operation that requires no tools.

Misc.

- If the rewinder is used without timer release (just as a gate), the electric connection to energizer can be either by wire as described above – or through the handle. It is however not recommended to use the rewinder as the single connection between energizer and long fences.
- The rewinder is designed to be taken apart without special tools. F.ex. if it needs to be cleaned from mud and dust. But it's important to follow instructions. It can be downloaded from our homepage.
- Spare parts are available from Your local distributor.
- If the rewinder is mounted on an existing fence/fence post, there can be a problem like the left picture when it opens. A simple piece of board screwed onto the post as in the right picture will solve that!

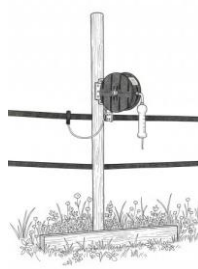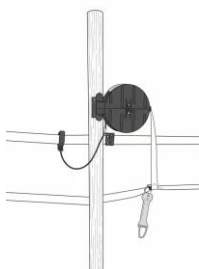

FEED-X™

Swedish Control Systems AB

Förrådsgatan 7 , 662 34 Åmål , SWEDEN

www.feed-x.se mail : info25@feed-x.se